

ODYUSA FFX LED Case's Controller Box User Manual

1. Controller Box Diagram




2. Controls and Connection Ports

- **Master / Slave** . (1) for Stand Alone Case Control set to "Master", (2) for Internal Link Control of two or more cases set the first case to "Master" and other linked cases to "Slave"
- **Built-in mic** . -for sound activated flashing controls
- **Sensitivity** -knob control for adjusting sensitivity of microphone (Stand alone and Internal Link Control only)
- **On/Off** -sound control button. Press for On. The green LED will light up when sound control is in effect (Stand alone and Internal Link Control only)
- **Color mode/Off (2 sec.)** color change and effects mode button (Stand alone and Internal Link Control only) Press button to turn on. Press again to change between 7 colors and 3 effects. Hold button down for 2 sec. to switch Off.
- **Flash Speed** -speed control button for flashing and color blend modes
- press button to change the speed between 2s, 1s, 0.5s, 0.1s, and 0.05sec.
- **In - Link** -CAT5 LAN RJ45 cable input port for internal or external linking
- **Control-Out** -CAT5 LAN RJ45 output port for Internal or External linking
- **DC 12V in** - power source connection in (AC100-240V, 50-60Hz, DC 12V, 0.5A)
- **To L. E. D panel** - 4-PIN DIN cable port to Flight FX case L. E. D panel

3. Connection Diagrams

(1) Stand Alone Case -single controller box

Set the controller box to "Master". The green LED light will be lit up.

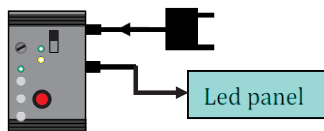

(2) Multiple Case Linking -two or more controller boxes

Set the first controller box to "Master". Connect the second, third, and so forth series of controller boxes using

CAT 5 LAN cables with RJ45 connectors and set each to "Slave". Use the "Master" controller box to choose the desired effect.

