

USER GUIDE

LE-202

asteroid 2

ODYSSEY



Thank you for choosing Odyssey Lighting. This lighting effect features preinstalled lamps and is ready to be used.

IMPORTANT!

Please read this User Guide before attempting to operate unit.

OPERATING INSTRUCTIONS

This unit is ready to be used. To ensure the longest possible lamp life, please follow the Duty Cycle. Place on a flat surface or mount upside down. The asteroid 2 is a great centerpiece effect, shooting 90 multicolor beams in every direction. The dual spheres roll around the base at a relatively constant rate.

CAUTION

Effect will get extremely hot. Please use a 10 min on & 10 min off **Duty Cycle** for best operation. After unit has been used, give unit enough time to cool down before handling it. **IMPORTANT!** Never open effect when in use, always disconnect cord from voltage before handling or moving the unit.

IMPORTANT!

Never open the unit when in use. Always disconnect the power cord from the power source when replacing lamp or servicing the unit. Always replace fuse and lamp with the exact same type.

LAMP REPLACEMENT

Remove the three screws on each lens dome. Then carefully remove the lens dome from the body. Next gently remove the old lamp, Then, using a clean cloth or glove, carefully insert the new lamp(s) into the black plastic socket(s). **NEVER TOUCH A NEW LAMP WITH YOUR BARE HANDS OR FINGERS** (oil and dirt on your skin will damage the bulb).

TROUBLESHOOTING

| | |
|-----------------------------------|--|
| 1. If the effect does not turn on | a) try plugging into an outlet you know is working. b) check fuse & make sure it is not blown |
|-----------------------------------|--|

WARNING
CAUTION:
UNPLUG UNIT
To avoid electrical shock unplug unit before servicing!
For Lamp Replacement:
Only use exact same voltage & lamp type

IMPORTANT
DUTY CYCLE
This device must be operated on a duty cycle.
Failure to comply may result in extreme damage to unit and may void warranty.

IMPORTANT
NEVER TOUCH
any Halogen Lamp with bare fingers. Oil from your fingers will shorten lamp life. Never move fixture until lamp has enough time to cool. Lamps are not covered under warranty.

| <i>Specifications</i> | |
|-----------------------|------------------|
| Beam Spread: | Wide |
| Lenses: | 90 |
| Beams: | 90 |
| Bulbs: | 2 |
| Lamp: | 120V 300W(64514) |
| Color: | Multi |
| Sound Active: | N |
| Fuse: | 5 Amp |
| Power: | 120V |
| Duty Cycle: | 10 min. |
| Warranty: | 90 days |
| Width: | 17.75" |
| Height: | 12" |
| Depth: | 17.75" |
| Weight: | 9.5 lbs. |

For service contact your local authorized ODYSSEY dealer or call 626.334.0800