

LE-606

# USER GUIDE

# *gobo storm*



Thank you for choosing Odyssey Lighting. This lighting effect features a preinstalled lamp and is ready to be used.

## IMPORTANT!

Please read this User Guide before attempting to operate unit.

### OPERATING INSTRUCTIONS

This unit is ready to be used. Different colored gobos will fill the air. There are three modes of operation which can be selected with the black toggle switch. Mode 1 will make the unit project a constant spinning moon flower effect. Mode 2 will make the unit project static (no movement) beams of light. Mode 3 will make the unit project a sound active moon flower effect. Multi-colored beams will react to audio (bass) sounds in music via the internal microphone. Make sure the effect is installed and operated in a well ventilated area with vents clear of obstacles. For the ultimate effect, fog or haze must be used in order to see the colorful beams. The duty cycle must be applied.

### CAUTION

The lens and surrounding area will become hot during normal operation of unit. Please use a 10 min. on & 10 min. off duty cycle for best operation and longer unit life. After operation allow sufficient time to cool down before handling or moving the unit.

### IMPORTANT!

Never open the unit when in use. Always disconnect the power cord from the power source when replacing lamp or servicing the unit. Always replace fuse and lamp with the exact same type.

### LAMP REPLACEMENT

Remove back lid from body of effect by unscrewing the thumb knob. Gently remove the old lamp. Then, using a clean cloth or glove, carefully insert the new lamp into the ceramic socket. NEVER TOUCH A NEW LAMP WITH YOUR BARE HANDS or FINGERS (oil and dirt on your skin will damage the bulb).

1. If the effect does not turn on	a) try plugging into an outlet you know is working. b) check fuse & make sure it is not blown
2. If the lamp is on but there is no movement	a) check toggle switch - turn switch up or down while music is playing (make sure there is plenty of bass in the music).

**WARNING**  
CAUTION:  
UNPLUG UNIT  
To avoid electrical shock unplug unit before servicing!  
For Lamp Replacement:  
Only use exact same voltage & lamp type

**IMPORTANT**  
DUTY CYCLE  
This device must be operated on a duty cycle.  
Failure to comply may result in extreme damage to unit and may void warranty.

**IMPORTANT**  
NEVER TOUCH  
any Halogen Lamp with bare fingers. Oil from your fingers will shorten lamp life. Never move fixture until lamp has enough time to cool. Lamps are not covered under warranty.

<i>Specifications</i>	
Beam Spread:	Medium
Lenses:	1
Beams:	Multi
Bulbs:	1
Lamp:	15V 150W
Color / gobo:	Multi / 1
Sound Active:	Y
Fuse:	3 Amp
Power:	120V
Duty Cycle:	10 min.
Warranty:	90 days
Width:	5.5"
Height:	7.25"
Depth:	14.5"
Weight:	6 lbs.

For service contact your local authored ODYSSEY dealer or call 626.334.0800