

# USER GUIDE

LE-610  
*lucky star*

**ODYSSEY**



Thank you for choosing Odyssey Lighting. This lighting effect features a preinstalled lamp and is ready to be used.

## IMPORTANT!

Please read this User Guide before attempting to operate unit.

### OPERATING INSTRUCTIONS

This unit is ready to be used. Multi-colored Gobo beams will react to audio (bass) sounds in music via the internal microphone. 3 position switch #1 controls mirror dish movement (Constant Rotation, Static or Sound Active). 3 position switch #2 controls Gobo wheel movement (Constant Rotation, Static or Sound Active). Make sure the effect is installed and operated in a well ventilated area with vents clear of obstacles. For the ultimate effect, fog or haze must be used in order to see the colorful beams. The duty cycle must be applied.

### CAUTION

The lens and surrounding area will become hot during normal operation of unit. Please use a 10 min. on & 10 min. off duty cycle for best operation and longer unit life. After operation allow sufficient time to cool down before handling or moving the unit. This unit is fan cooled.



### IMPORTANT!

Never open the unit when in use. Always disconnect the power cord from the power source when replacing lamp or servicing the unit. Always replace fuse and lamp with the exact same type.

### LAMP REPLACEMENT

Remove front lamp door from body of effect. Gently remove the old lamp. Then, using a clean cloth or glove, carefully insert the new lamp into the ceramic socket. NEVER TOUCH A NEW LAMP WITH YOUR BARE HANDS or FINGERS (oil and dirt on your skin will damage the bulb).

|   |   |
|---|---|
| 1. If the effect does not turn on             | a) try plugging into an outlet you know is working.<br>b) check fuse & make sure it is not blown            |
| 2. If the lamp is on but there is no movement | a) Check both 3 position switches, make sure they are either up or down for mirror and gobo wheel rotation. |

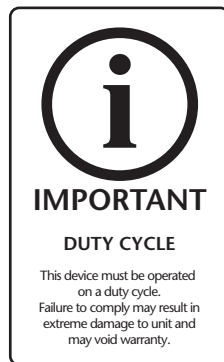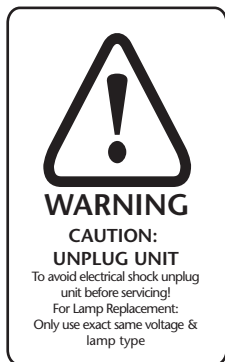

| Specifications |                       |
|----------------|-----------------------|
| Beam Spread:   | Medium                |
| Lenses:        | 1                     |
| Beams:         | Multi                 |
| Bulbs:         | 1                     |
| Lamp:          | 12V 100W (EFP)        |
| Colored Gobos: | 18                    |
| Sound Active:  | Yes                   |
| Fuse:          | 3 Amp                 |
| Power:         | 120V                  |
| Duty Cycle:    | 10 min on/10 min. off |
| Warranty:      | 90 days               |
| Width:         | 10"                   |
| Height:        | 5"                    |
| Depth:         | 10.75"                |
| Weight:        | 10 lbs.               |

For service contact your local authored ODYSSEY dealer or call 626.334.0800