

IMPORTANT: PLEASE READ AND SAVE ALL INSTRUCTIONS CAREFULLY BEFORE USING THIS PRODUCT

SPECIFICATIONS:

- Input power: 110 volts, 60 Hz,
- Fuse Type: 125 Volts, 5 Amps. Quick Acting
- Tank Capacity: 1 Liter
- Warm Up Time: Approximately 7 minutes
- Fog Output: Approximately 1,700 ~ 2,000 cubic feet per minute.
- 450 watt heater

WARNING: This product is recommended for **INDOOR USE ONLY**. To reduce the risk of fire or shock hazard, do not expose this product to rain, moisture or excessive dust.

CAUTION:

- TO REDUCE THE RISK OF ELECTRIC SHOCK, DO NOT OPEN THE COVER or ANY PART OF THE HOUSING. There are NO USER-SERVICEABLE PARTS INSIDE. REFER SERVICING TO QUALIFIED TECHNICIAN.
- The fog machine is equipped with a three-wire grounding type plug. This plug will only fit into a grounding type AC power outlet. This is a safety feature. If you are unable to insert the plug into your AC power outlet, contact your electrician to replace your outlet. DO NOT defeat the purpose of the grounding-type plug.
- Use in a well ventilated area.
- Do not expose at close range to known asthmatics.
- Vapor from the fog machine may be irritating to some persons with allergic sensitivity.
- The fog machine casing will get hot, always use the handles to carry the fog machine.
- To avoid injury from hot steam ^ keep at least three feet away from nozzle.

OPERATING INSTRUCTIONS:

1. Always place this product on a flat, stable and heat-resistant surface and keep unit level at all times.
2. Unscrew the cap on the top of the fogger and fill with water based Fog Solution.
3. Close the cap tightly. Always make sure there is plenty of fluid in the tank before using the fog machine.
4. Plug the cord of the Remote Fog Controller into the outlet on the back of the Fog Machine.
5. Plug the A/C power cord into a standard 110 volt A/C grounded wall outlet.
6. It will take approximately 6 to 8 minutes for the fogger to warm up initially.
7. When fully heated, the ORANGE power indicator light will light up indicating that the machine is ready.
8. Simply press and hold the GREEN button on the remote control for the desired duration of spray.
9. The average fogger blast time is 60 seconds. The fogger will automatically stop when it needs to reheat.
10. Release the GREEN button and wait for the light to come on before operating again.
11. A/C power cord must be unplugged from the wall outlet when not in use.

REPLACE THE FUSE:

- Grasp plug and remove from the receptacle or other outlet device. Do not unplug by pulling cord.
- Open fuse cover, with Philips screwdriver: remove fuse carefully
- Replace fuse only with 5 Amps, 125 Volts fuse;
- Close fuse cover.



***CONTINUED ON NEXT PAGE**

IMPORTANT: PLEASE READ AND SAVE ALL INSTRUCTIONS CAREFULLY BEFORE USING THIS PRODUCT

SAFETY INFORMATION:

1. For special effects only! Not recommended for anything other than special effects use.
2. For adult use only. Keep out of reach of children and pets. Close Adult supervision is necessary when children or pets are present.
3. Always operate the fogger in an open, well-ventilated area.
4. Keep the nozzle 20" clear of contact with anything while in use.
5. Allow at least 12" free air space around the sides and top of the unit to allow for adequate ventilation. Never cover or block air vents.
6. To prevent the risk of fire, do not use the fogger remote control with other products.
7. To reduce the risk of fire or shock, do not expose the product to rain, moisture or dust. If water or dust gets into the housing, unplug the unit immediately and contact a qualified service technician.
8. Do not leave fogger unattended while in use. Always unplug the unit from the electrical outlet when unattended.
9. Do not allow the power cord or remote cord to hang or rest in a way that it can be tripped over or pulled.
10. Use with a 3-prong, grounded electrical outlet only.
11. Do not operate within 3 feet of electrical devices such as refrigerators, television, microwaves or heaters.
12. Always disconnect fog machine from power source when not in use.

QUICK SAFETY AND OPERATING TIPS:

- Always use The fog machine with adult supervision.
- Never drink the fog Solution.
- DO NOT expose Fog Spray to known asthmatics or allergenic sensitive people
- The machine is not water-proof or splash-proof. When outdoors, use under a covered area.
- When indoors, use in well ventilated areas to avoid setting off smoke detectors.
- Use with caution. It is normal for residue to build up under the nozzle and drop to the floor. This can cause a slick area an create a slipping hazard.
- Keep the Fog Machine nozzle at least 3 feet away from any person or objects. Small bursts will spray out while the machine is waiting for the next spray cycle. This is normal.
- The fog spray output is very hot! Never aim the nozzle at people or pets.
- Do not move the machine while in operation. Allow the unit to cool down before handling or servicing.
- Always place the Fog Machine on a flat, stable surface.

FREQUENTLY ASKED QUESTION:

Q: Is simulated emitting fog safe to breathe in?

A: Our Fogzone 500 fog machine uses a water based fog fluid which contains NO hazardous chemicals or solutions that may be health threatening to any humans or animals. However, some people with respiratory problems may develop discomfort being around and breathing in simulated emitting fog. Prolonged exposure to simulated fog may also cause irritation to some people with delicate respiratory systems. The key is to have adequate ventilation wherever a fog machine is being used.

PAGE 2