# USER GUIDE LI-822 V-TRAC SCAN RG



V-I KAL SLAN KU **60035555** ank you for choosing Odyssey Lighting. This lighting effect

Thank you for choosing Odyssey Lighting. This lighting effect features a preinstalled lamp and is ready to be used.

# **IMPORTANT!**

Please read this User Guide before attempting to operate unit.

## **OPERATING INSTRUCTIONS**

This unit is ready to be used. Four colored beams will scan through the air to audio (bass) sounds in music via the internal microphone or through DMX control. For sound active mode, set the dip switches to "all off" and then adjust the sensitivity knob to the right. The knob is located next to the mirror. For DMX mode, set the dip switches on each unit in binary code according to the DMX channel you are controlling that unit with. Make sure the effect is installed and operated in a well ventilated area with vents clear of obstacles. For the ultimate ct, fog or haze must be used in order to see the colorful beams. The duty cycle must be applied.

## CAUTION

The lens and surrounding area will become hot during normal operation of unit. After operation allow sufficient time to cool down before handling or moving the unit. This unit is fan cooled.

#### **IMPORTANT!**

1-USER GUIDE

**1-WARRANTY** 

Never open the unit when in use. Always disconnect the power cord from the power source when replacing lamp or servicing the unit. Always replace fuse and lamp with the exact same type.

#### LAMP REPLACEMENT

Remove Lamp Door from body of effect. Gently remove the old lamp. Then, using a clean cloth or glove, carefully insert the new lamp into the ceramic socket. NEVER TOUCH A NEW LAMP WITH YOUR BARE HANDS or FINGERS (oil and dirt on your skin will damage the bulb).

| 1. If the effect does not turn on             | a) try plugging into an outlet you know is working.<br>b) check fuse & make sure it is not blown        |
|---|---|
| 2. If the lamp is on but there is no movement | a) Adjust the sensitivity knob while music is playing (make sure there is plenty of bass in the music). |

| WARNING<br>CAUTION:<br>UNPLUG UNIT<br>To avoid electrical shock unplug<br>unit before servicing!<br>For Lamp Replacement:<br>Only use exact same voltage &<br>Lamp type | IMPORTANT<br>DUTY CYCLE<br>This device must be operated<br>on a duty cycle.<br>Failure to comply may result in<br>extreme damage to unit and<br>may void warranty. | Interventional and the second |
|---|--|---|
| Out of the box invento<br>1-VTRAC QUAD<br>1-10" POWER CABLE<br>1-15" XLR CABLE  | ODYSSEY dealer   | ct your local authored<br>or call 626.334.0800  |

Odyssey Innovative Designs 155 N. Aspan Ave. Azusa, Ca. 91702

| Specifications |                |  |  |
|----------------|----------------|--|--|
| Beam Spread:   | Spot           |  |  |
| Lenses:        | 1              |  |  |
| Beams:         | 1              |  |  |
| Bulbs:         | 1              |  |  |
| Lamp:          | 24V 250W (ELC) |  |  |
| Colors:        | 8 + white      |  |  |
| Sound Active:  | Yes            |  |  |
| Fuse:          | 5 Amp          |  |  |
| Power:         | 120V           |  |  |
| Duty Cycle:    | 6 Hours        |  |  |
| Warranty:      | 1 year         |  |  |
| Width:         | 7"             |  |  |
| Height:        | 16"            |  |  |
| Depth:         | 10"            |  |  |
| Weight:        | 19 lbs.        |  |  |
| Strobing:      | No             |  |  |
| Master/Slave:  | Yes            |  |  |
|                |                |  |  |

DMX CHANNELS Channel #1 Color Channel #2 Gobo Channel #3 Rotation Channel #4 Shutter Channel #5 Pan Channel #6 Tilt Channel #7 Dimmer



Use dip switches #11 & #12 for sound-active mode. Use #11 only for auto mode.