
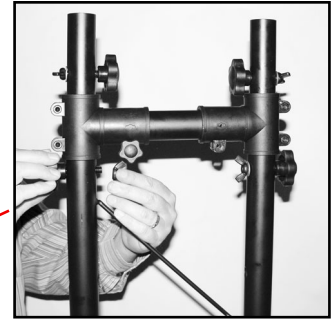


PARTS LIST

ODYSSEY LTMTS1PRO CRANK TRUSS SYSTEM

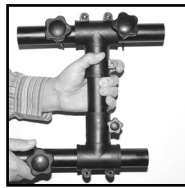


Step 3.
Lock together security tubes, I beam support bar and I beam sections with the 4 included knobs and wing nuts.

Step 4.
Connect last remaining 4 T Connectors to the end of the I Beam span you assembled.



Step 6.
Loosen and tighten safety knob on crank assembly when desired height is met on both crank stands.

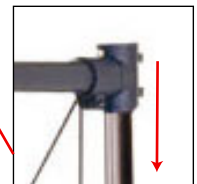

Step 5.
Slide the entire 10i I Beam span onto the 2 tripod crank stands and tighten securely all 4 T Connectors.

Step 7.
Expand tripod legs on each stand for proper balance of truss system.

